



Water Dispenser

Model : J80NHC (Bubbletop)

Water Dispenser

WARNING

TO REDUCE THE RISK OF INJURY AND PROPERTY DAMAGE, USER MUST READ THIS MANUAL BEFORE ASSEMBLING, INSTALLING & OPERATING DISPENSER.

SAVE THIS MANUAL FOR FUTURE USE

JAS ASSOCIATES
COIMBATORE
INDIA
+ 91 9787844568
www.jasassociates.org

MADE IN INDIA



FEATURES & FUNCTIONS



- **Water Bottle** – Not included. Uses 20 or 25 liter bottles.
- **Normal Water Control** – Press push cock to dispense. Release push cock to stop.
- **Cold Water Control** – Press push cock to dispense. Release push cock to stop.
- **Hot Water Control** – Press push cock to dispense. Release push cock to stop.
- **LED** – Power and Heater Indication.
- **Drip Tray**
- **Fridge**
- **Energy Saver Switches** – Located on back. Switch red control to off to stop heating. Switch green control to off to stop cooling.
- **Height adjustable**

SAFETY PRECAUTIONS

WARNING

To reduce risk of injury and property damage, user must read this entire guide before assembling, installing & operating dispenser. Failure to execute the instructions in this manual can cause personal injury or property damage.

This product dispenses water at very high temperatures. Failure to use properly can cause personal injury.

When operating this dispenser, always exercise basic safety precautions, including the following:

- Prior to use, this dispenser must be properly assembled and installed in accordance with this manual.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- Children being supervised not to play with the appliance.
- This dispenser is intended for water dispensing only. Do NOT use other liquids. Do NOT use for other purposes. Never use any other liquid in the dispenser other than known and microbiologically safe bottled water.
- Install and use only on a hard, flat and level surface.
- Do NOT place dispenser into an enclosed space or cabinet.
- Do NOT operate dispenser in the presence of explosive fumes.
- Position back of dispenser no closer than 4 inches from wall and permit free airflow between wall and dispenser. There must be at least 4 inches clearance on the sides of the dispenser to permit airflow.
- Use only properly grounded outlets.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent. Or similarly qualified persons in order to avoid a hazard.
- Always grasp plug and pull straight out from outlet. Never unplug by pulling on power cord.
- Do NOT use dispenser if cord becomes frayed or otherwise damaged.
- Ensure dispenser is unplugged prior to cleaning.
- Do not dispense hot water if water bottle is empty.
- The appliance must not be cleaned by a water jet.

LIMITED WARRANTY

Jas Water Dispenser, ("Vendor") warrants to the original purchaser of this dispenser, and to no other person, that if this dispenser is assembled and operated in accordance with the printed instructions accompanying it, then for a period of one (1) year from the date of purchase, for electrical parts in such dispenser shall be free from defects in material and workmanship. Vendor may require reasonable proof of your date of purchase from an authorized retailer or distributor. Therefore, you should retain your sales slip or invoice. The Limited Warranty shall be limited to repair or replacement of parts, which prove defective under normal use and service and which Vendor shall determine in its reasonable discretion upon examination to be defective. Before returning any parts, you should contact Vendor's Customer Service Department using the contact information listed below. If Vendor confirms, after examination, a defect covered by this Limited Warranty in any returned part, and if Vendor approves claim, Vendor will replace such defective part without charge. If you return defective parts, transportation charges must be prepaid by you. Vendor will return replacement parts to original purchaser, freight or postage prepaid. For units purchased outside of the continent, dispensers determined to be defective by the Vendor should be returned or exchanged at the original point of purchase within the warranty period.

The Limited Warranty does not cover any failures or operating difficulties due to accident, abuse, misuse, alteration, misapplication, improper installation or improper maintenance or service by you or any third party, or failure to perform normal and routine maintenance on the dispenser, as set out in the User's Manual. In addition, the Limited Warranty does not cover damages to the finish, such as scratches, dents, discoloration or rust after purchase.

The Limited Warranty is in lieu of all other express warranties. Vendor disclaims all warranties for products that are purchased from seller other than authorized retailers or distributors. FURTHER, VENDOR SHALL HAVE NO LIABILITY WHATSOEVER TO PURCHASER OR ANY THIRD PARTY FOR ANY SPECIAL, INDIRECT, PUNITIVE, INCIDENTAL, OR CONSEQUENTIAL DAMAGES. Vendor assumes no responsibility for any defects caused by third parties. This Limited Warranty gives the purchaser specific legal rights; a purchaser may have other rights depending upon where he or she lives. Some jurisdictions do not allow exclusion or limitation of special, incidental or consequential damages, or limitations on how long a warranty lasts, so the above exclusion and limitations may not apply to you.

Jas Associates,
+91 9787844568
www.jasassociates.org

Instructions :

Cleaning :

- Power should be off before cleaning.
- Use Dry Clothes.
- Can use lemon liquid or spray for descaling or disinfection.
- Should be clean once in a month.

Safety and Hygiene:

- Access to the service area is restricted to persons having knowledge and practical experience of the appliance, in particular as far as safety and hygiene are concerned.

Maintenance :

- Ensure the water storage tank should not be empty.
- Ambient temperature for correct operation (Min 5° C to Max 40° C)
- Please don't set the cold temperature level below 4°C to avoid freezing.
- If Freezing occurs : Increase the cold temperature level or off the cold switch for few minutes .
- Use 20Liter's or 25Liter's Bubbletop Mineral Water Can for water filling.
- Should not remove the water can before filling the water in the storage tank to avoid spillage of water.
- Do not adjust the temperature control's settings frequently.
- Adjust the hot and cold temperature settings, if needed.
- Easy Replaceable Spares : (Hot & Cold Thermostat, Heater Coil, Switches, Water Taps , Bubbletop can mounting cap)

GETTING STARTED

Install Water Bottle

1. Remove tamper seal from top of bottle cap. Do NOT remove plastic cap.
2. Clean bottle cap and neck with a cloth and warm soapy water, then rinse.
3. Lift bottle and insert onto the probe. and the bottle is seated. Water will begin to flow into the reservoirs causing air bubbles in the bottle.

Provide Electricity

Plug cord into a properly grounded wall outlet.

Activate Heating & Cooling

Notice: This unit will not dispense hot or cold water until the switches are activated.

To activate, press on back side of power switches in to start heating and cooling water.

- If you want hot water, press the red switch to ON position .
- If you want cold water, press the green switch to ON position.
- If you do not want to hot water, press the red switch to OFF position.
- If you do not want to cold water, press the green switch to OFF position.

DISPENSING WATER

This unit has been tested and sanitized prior to packing and shipping. During transit dust and odors can accumulate in the tank and lines. Dispense and dispose at least one quart of water prior to drinking any water.

Dispensing Cold Water 4°C – 11°C)

After setup, it will take 1 hour to get water to maximum cold temperature. During this time the compressor will run continuously. This is normal.

1. Position bottle, glass, pitcher or cooking pot below tap.
2. Using your beverage container, press cold water tap towards dispenser to start cold water flow.
3. Release cold water tap once desired fill level is achieved.

Dispensing Hot Water (88°C – 92°C)

CAUTION

This unit dispenses water at temperatures that can cause severe burns. Avoid direct contact with hot water. Keep children and pets away from unit while dispensing. Never allow children to dispense hot water without proper and direct supervision. Unplug unit to prevent unsupervised use by children.

After setup, hot water will be available in 5-10 minutes.

1. Position bottle, glass, pitcher or cooking pot below Tap.
2. Press push cock tap to start hotwater flow.
3. Release hot water push cock tap once desired fill level is achieved.

TROUBLESHOOTING

Water is leaking.

- Bottle may have a leak that is too large for the Leak Guard feature to stop. Remove bottle, dispense one quart of water and install new bottle.
- If leak remains, remove bottle and call service engineer for assistance.

No water is coming from the spout.

- Make sure the bottle is not empty. If empty, replace it.
- Make sure to push the water controls in fully.

Cold water is not cold.

- It takes up to one hour after setup to dispense cold water.
- Make sure the power cord is properly connected to a working outlet.
- Make sure the back of the dispenser is at least 4 inches from a wall and there is free airflow on all 4 sides of the dispenser.
- Make sure green power switch on back of dispenser is ON.
- If water still isn't cold, please call service engineer for assistance.

Hot water is not hot.

- It takes 15-20 minutes after setup to dispense hot water.
- Make sure the power cord is properly connected to a working outlet.
- Make sure red power switch on back of dispenser is ON.

Dispenser Is Noisy

- Make sure the dispenser is positioned on a level surface.